


INSTRUCTION

External RH sensor for CDP-(T)/CDF 40-50-70

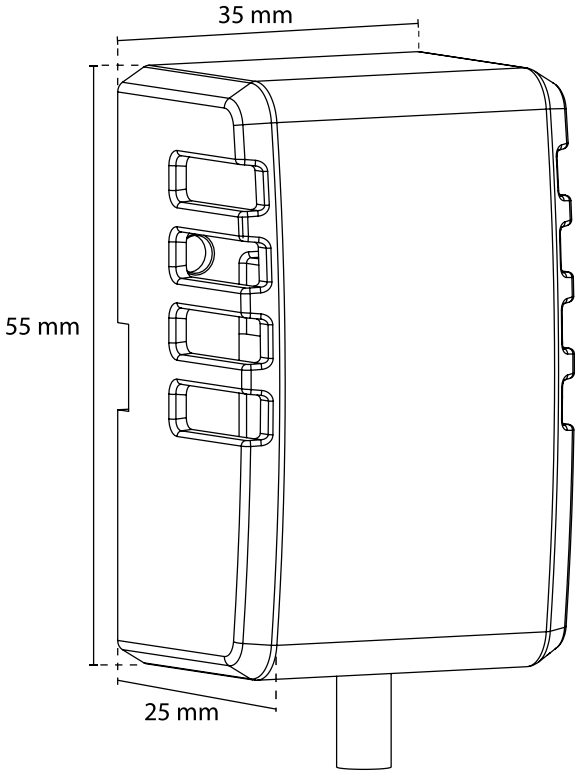




2x
2x
10 m

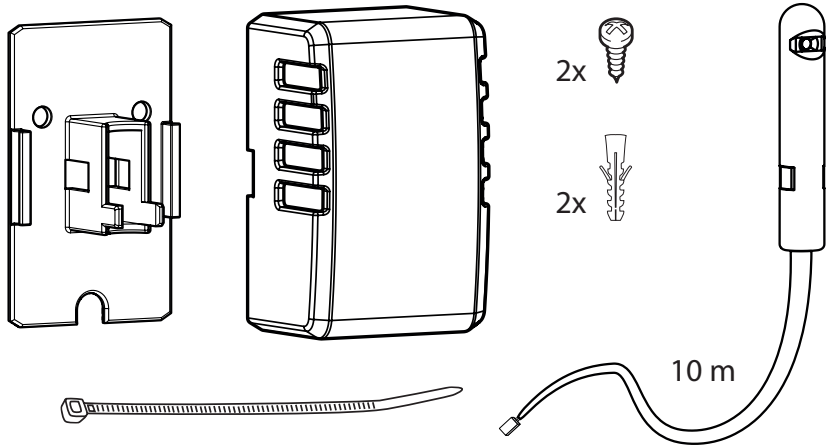

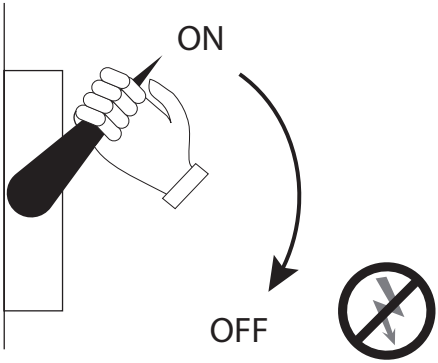


1

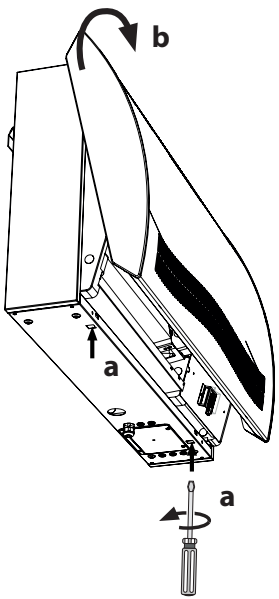


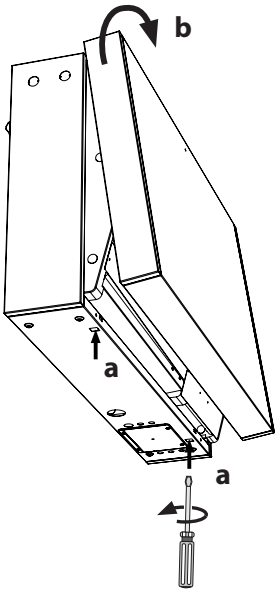


2

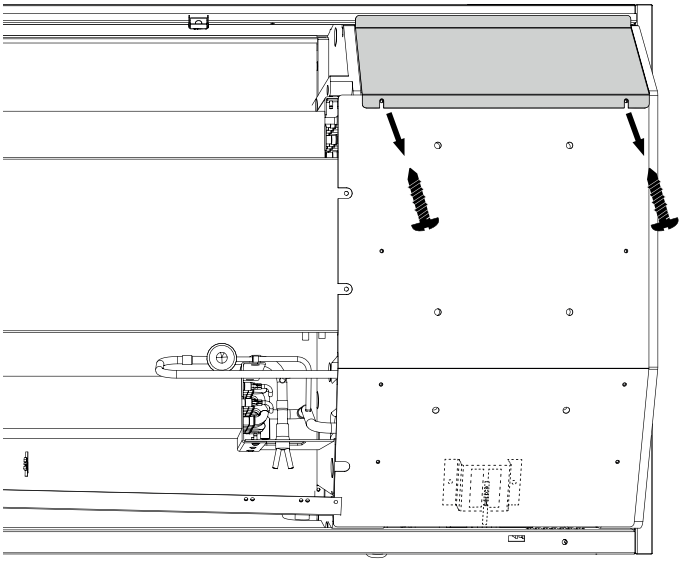

3

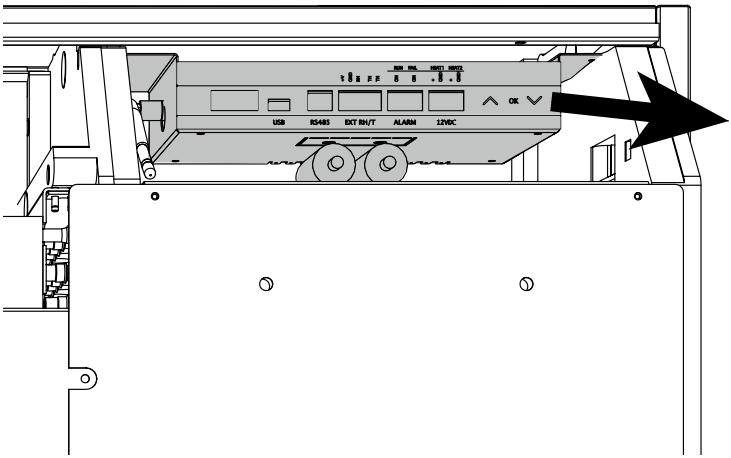


4

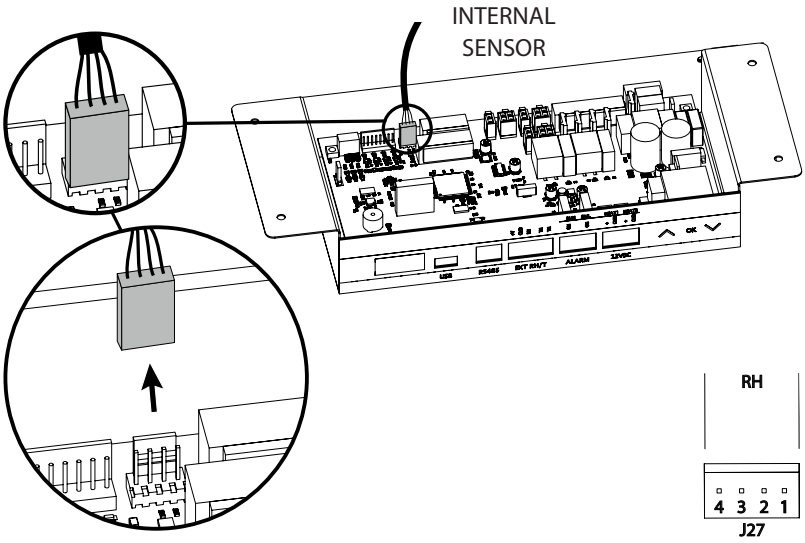

INTERNAL
SENSOR
USB
RS485
EXT RH/T
ALARM
12VDC
OK

RH
4 3 2 1
J27


5

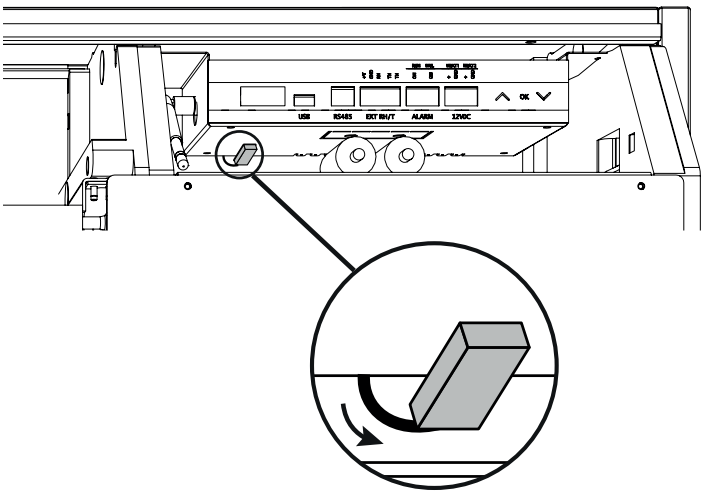
USB
RS485
EXT RH/T
ALARM
12VDC
OK
INTERNAL
SENSOR


6

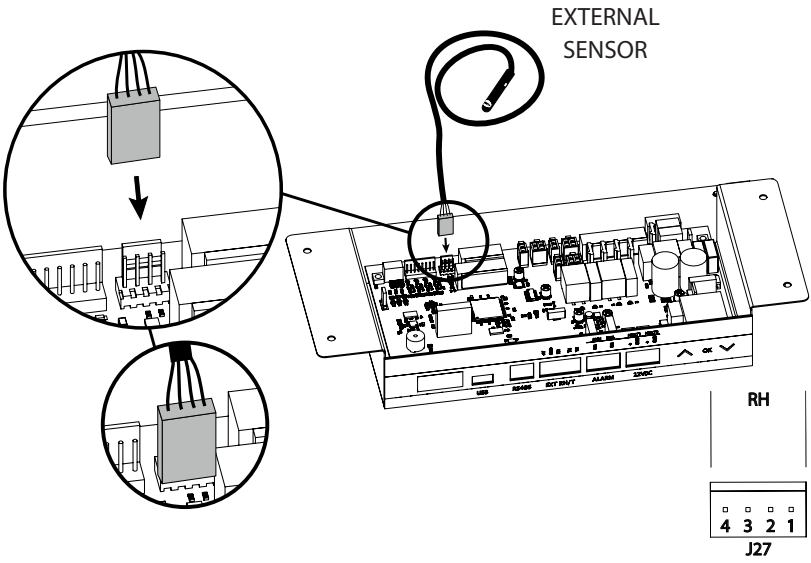
EXTERNAL
SENSOR
RH
4 3 2 1
J27


7

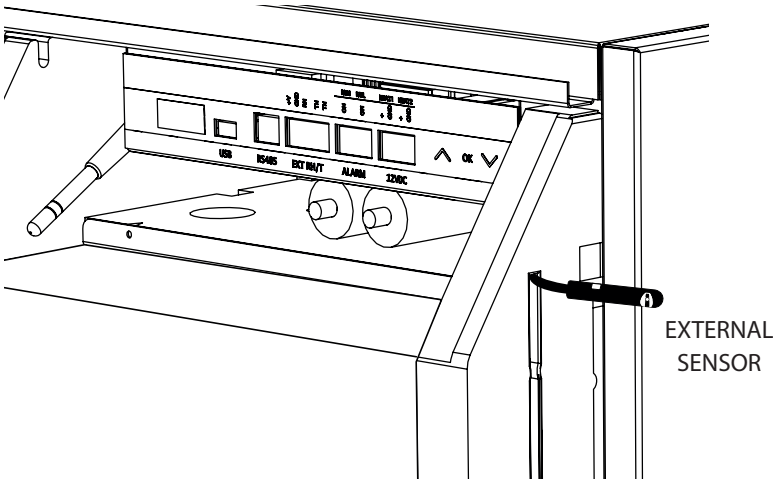
USB
RS485
EXT INH/T
ALARM
220VAC
OK
EXTERNAL
SENSOR


8

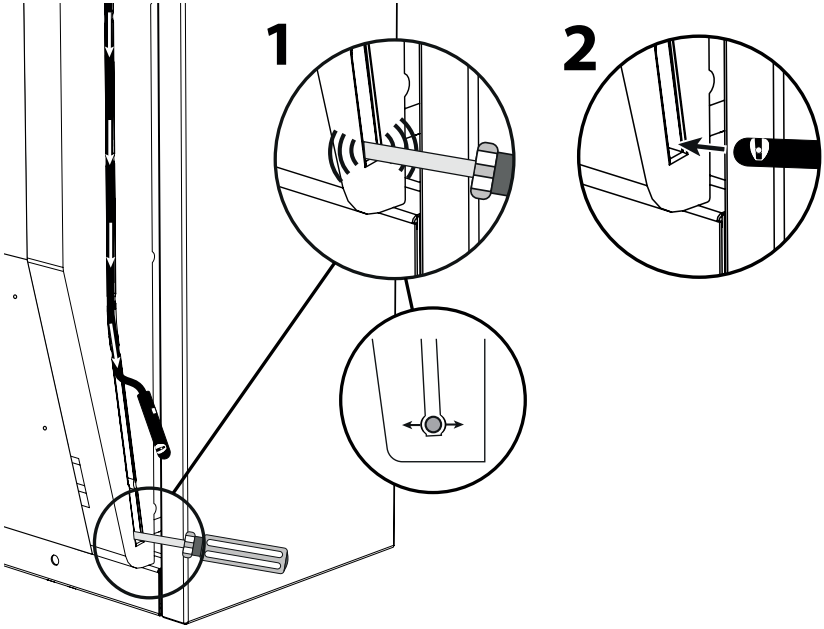


9

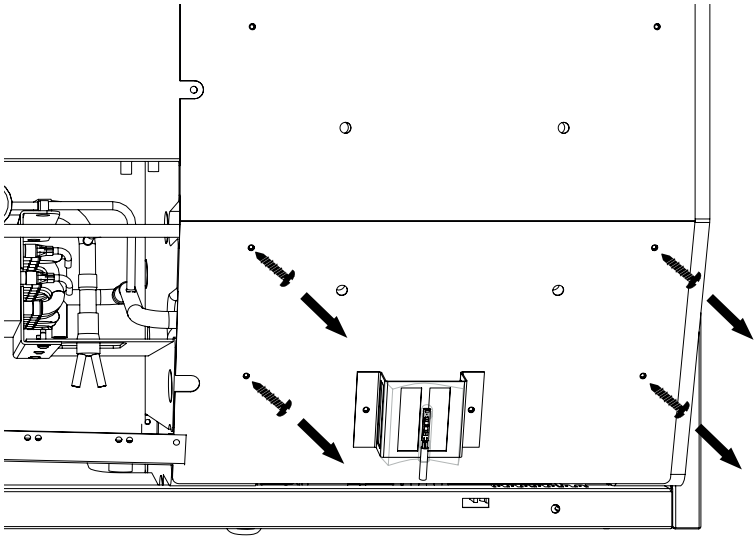


10

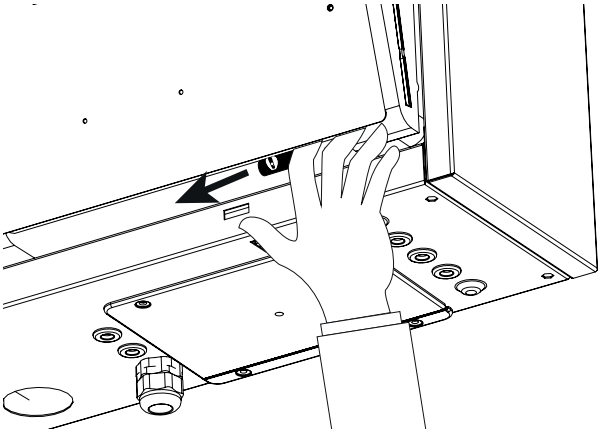


11

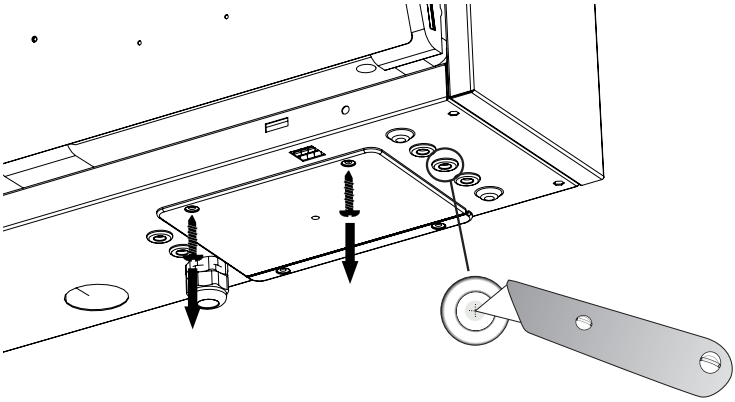


12

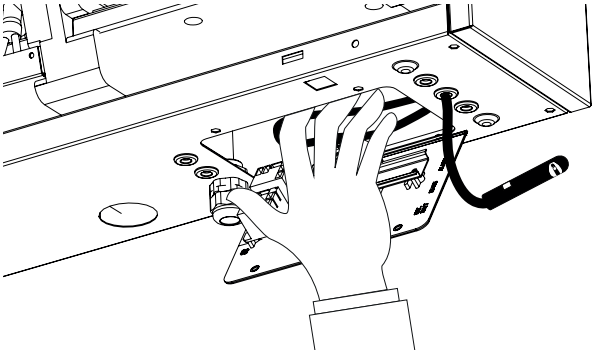


13

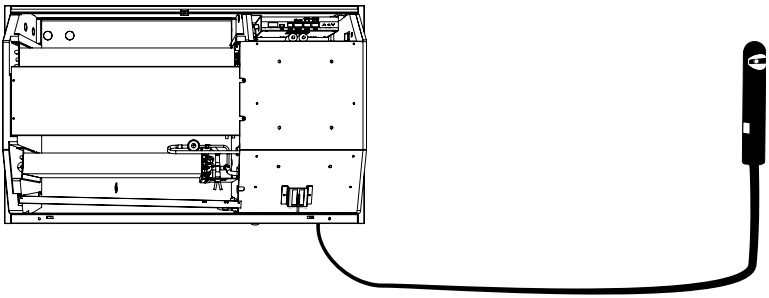


14

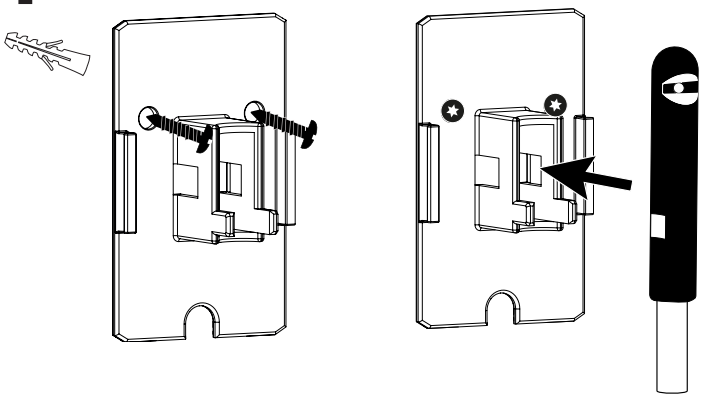


15

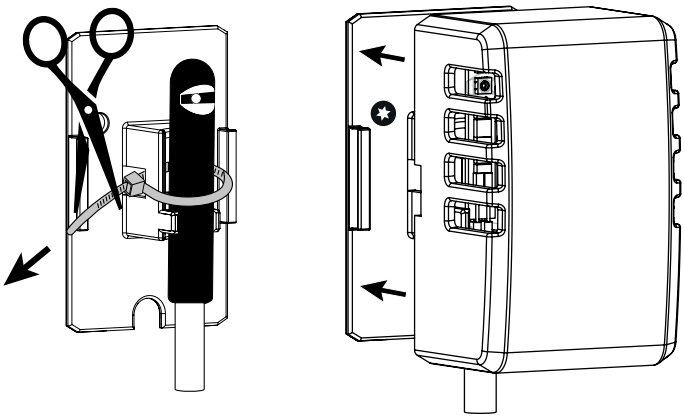


16

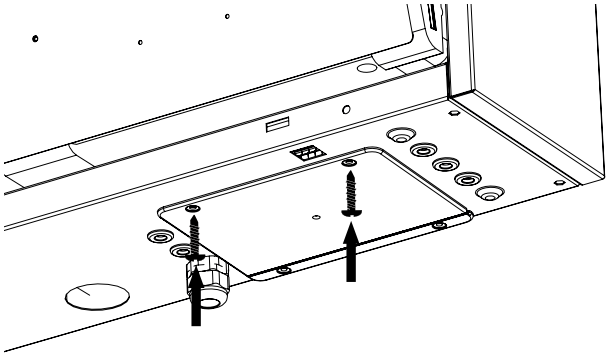


17

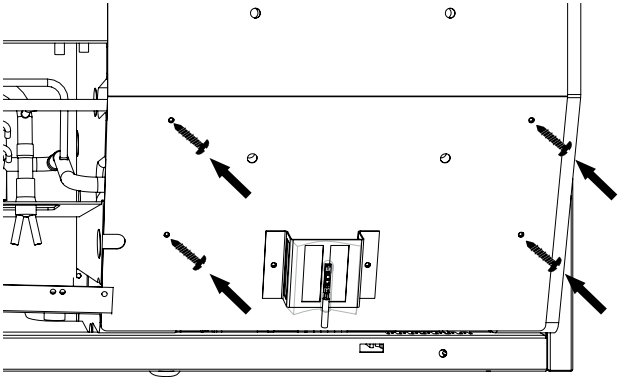

18

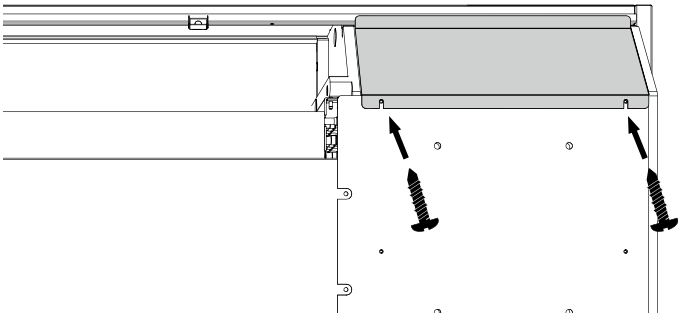

19

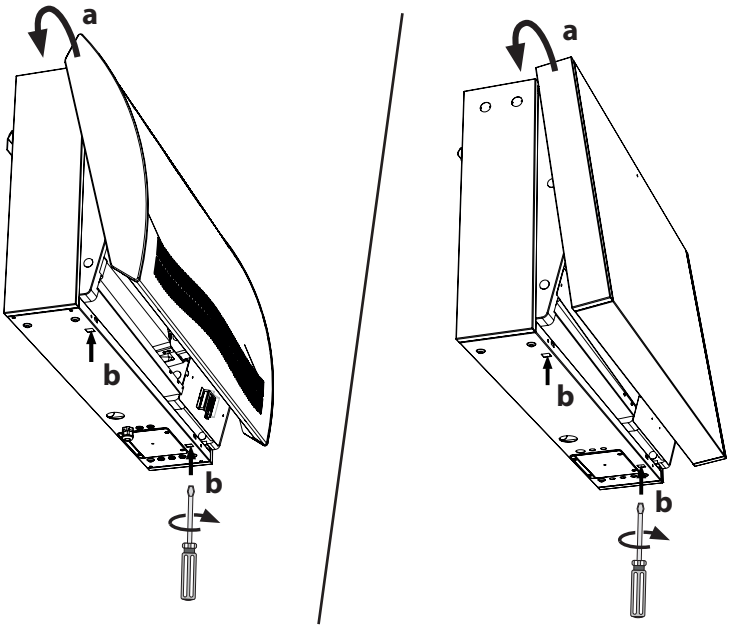


052506